



Airspace Flash Cards


Copyright AOPA Air Safety Foundation
www.asf.org
12/05



- Land-Based ADIZ**
(Air Defense Identification Zone)
- Description**
- Includes the entire Washington, D.C./Baltimore Class B airspace, plus an extension to the south, from the surface to 18,000 msl
 - Others may be established by notam
- Pilot/Aircraft Requirements**
- Flight plan
 - ATC communication
 - Discrete transponder code
- **Special procedures apply: Refer to AOPA's online course: www.aopa.org/adiz**

Question: If you're cleared to enter the ADIZ, do you also have permission to enter the Class B airspace within?

Answer: No. You need a specific clearance to enter the Class B airspace.

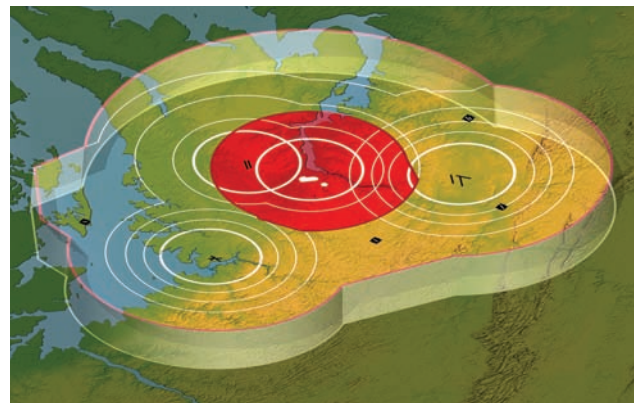



Answer: Yes. Before flying into the FRZ, GA pilots must undergo a background check and follow special procedures. For more information, refer to AOPA's issue brief: www.aopa.org/whatsnew/air_traffic/frz.html

Question: Is there any way to legally fly into the FRZ?



FRZ

(Flight Restricted Zone)
Ref. SFAR 94 to Part 91

Description


- 15 nm radius of Washington, DC
- Surface to 18,000 msl
- General aviation flight prohibited with limited exceptions

Pilot/Aircraft Requirements

- Not applicable


Copyright AOPA Air Safety Foundation
www.asf.org



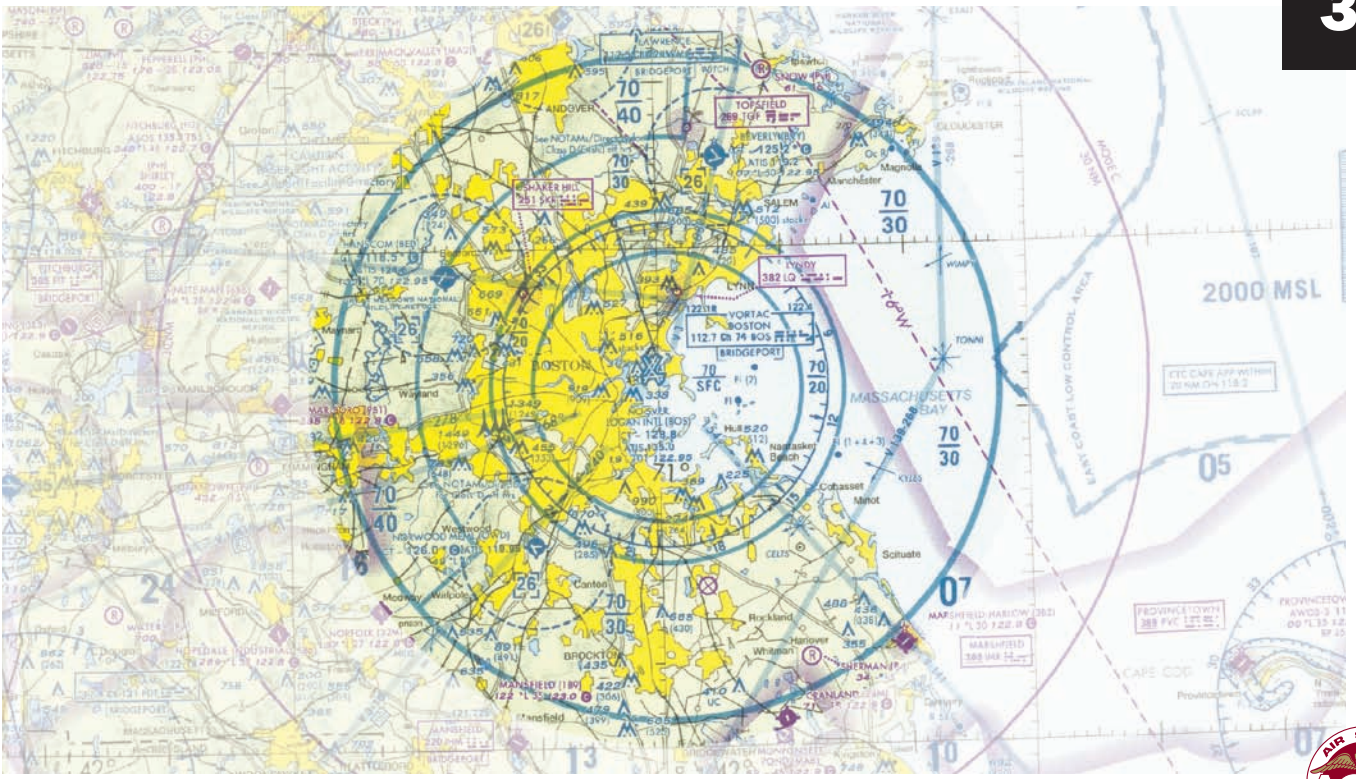

Question: What if the controller puts you on a heading that will take you into the airspace, but doesn't actually tell you that you're cleared into the airspace?

Answer: You need to hear the words "cleared into the Class B airspace," or equivalent. If you don't, be sure to ask the controller before you enter the airspace.

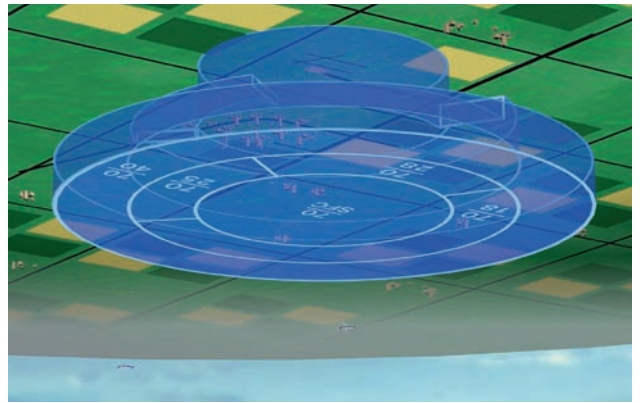

Class B Airspace

Ref. AIM 3-2.3

Description

- Surrounds certain large airports
- Within each Class B airspace area, there are multiple segments with different ceiling/floor altitudes.
- Example: 70/30 = ceiling 7,000 msl, floor 3,000 msl
- Student pilot operations restricted


Pilot/Aircraft Requirements

- ATC clearance
- Establish and maintain two-way communication prior to entering Mode C transponder (within 30 nm, up to 10,000 msl)
- Visibility: Three statute miles
- Cloud clearance: Clear of clouds

Copyright AOPA Air Safety Foundation


www.asf.org



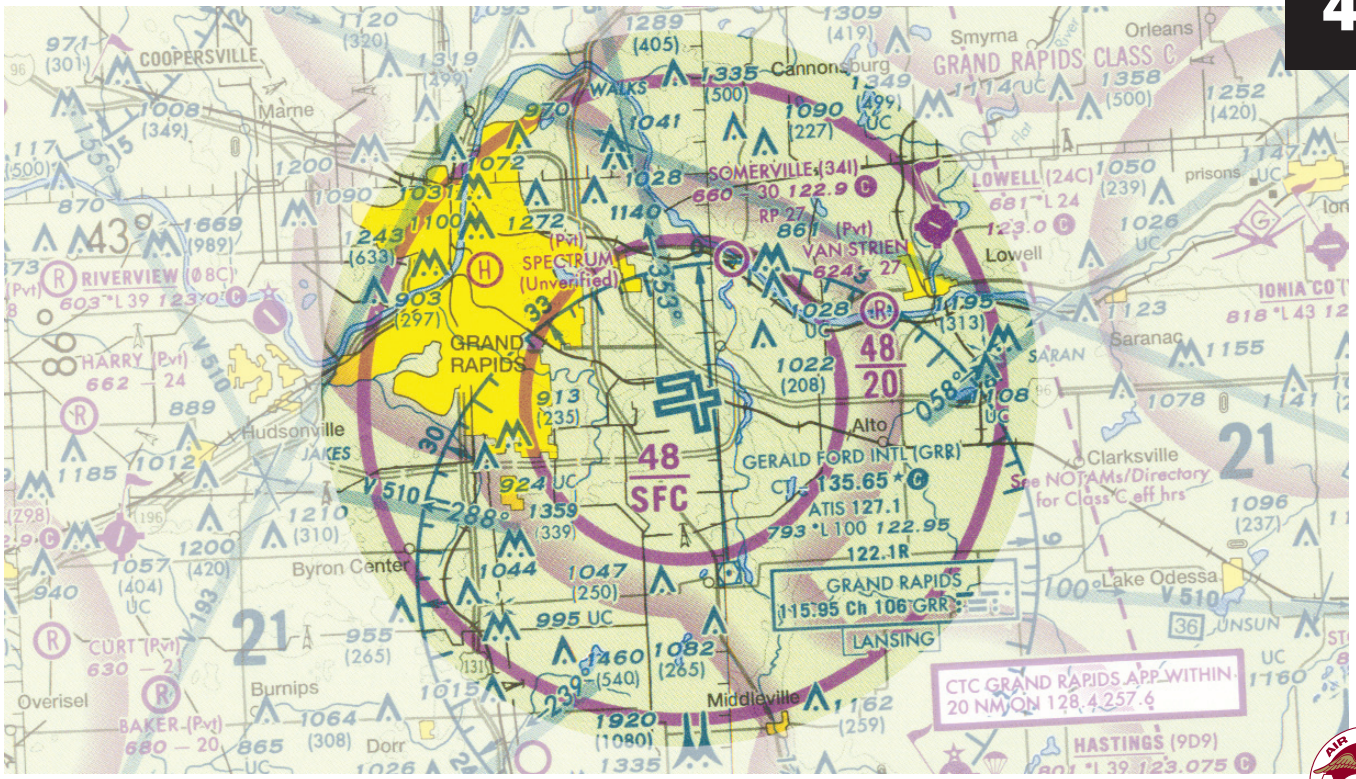

Question: You're departing from a small non-towered field three miles from the primary airport in Class C airspace. Are you required to contact ATC prior to takeoff?

Answer: Follow any procedures specified in the Airport/Facility Directory: In many cases, you may be able to contact ATC from the ground. Generally, however, you are only required to contact ATC as soon as practical after departure.

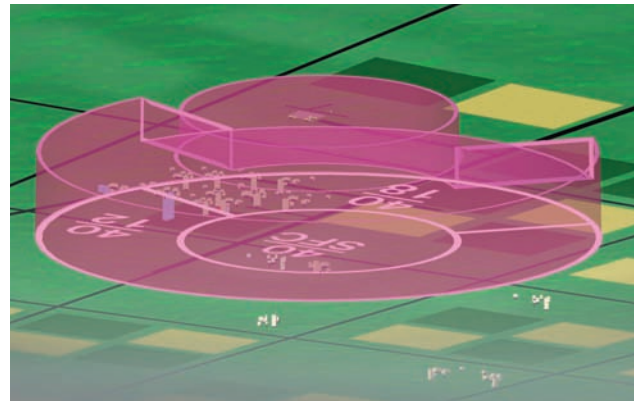

Class C Airspace

Ref. AIM 3-2-4

Description

- Surrounds certain medium-sized airports
- Typically 20nm in diameter
- Generally includes two segments with different floor/ceiling altitudes
- Usually extends to 4,000 agl

Pilot/Aircraft Requirements


- Establish and maintain two-way communication prior to entering
- Mode C transponder
- Visibility: Three statute miles
- Cloud clearance:
- 500 feet below
- 1,000 feet above
- 2,000 feet horizontal




Copyright AOPA Air Safety Foundation

www.asf.org

12/05

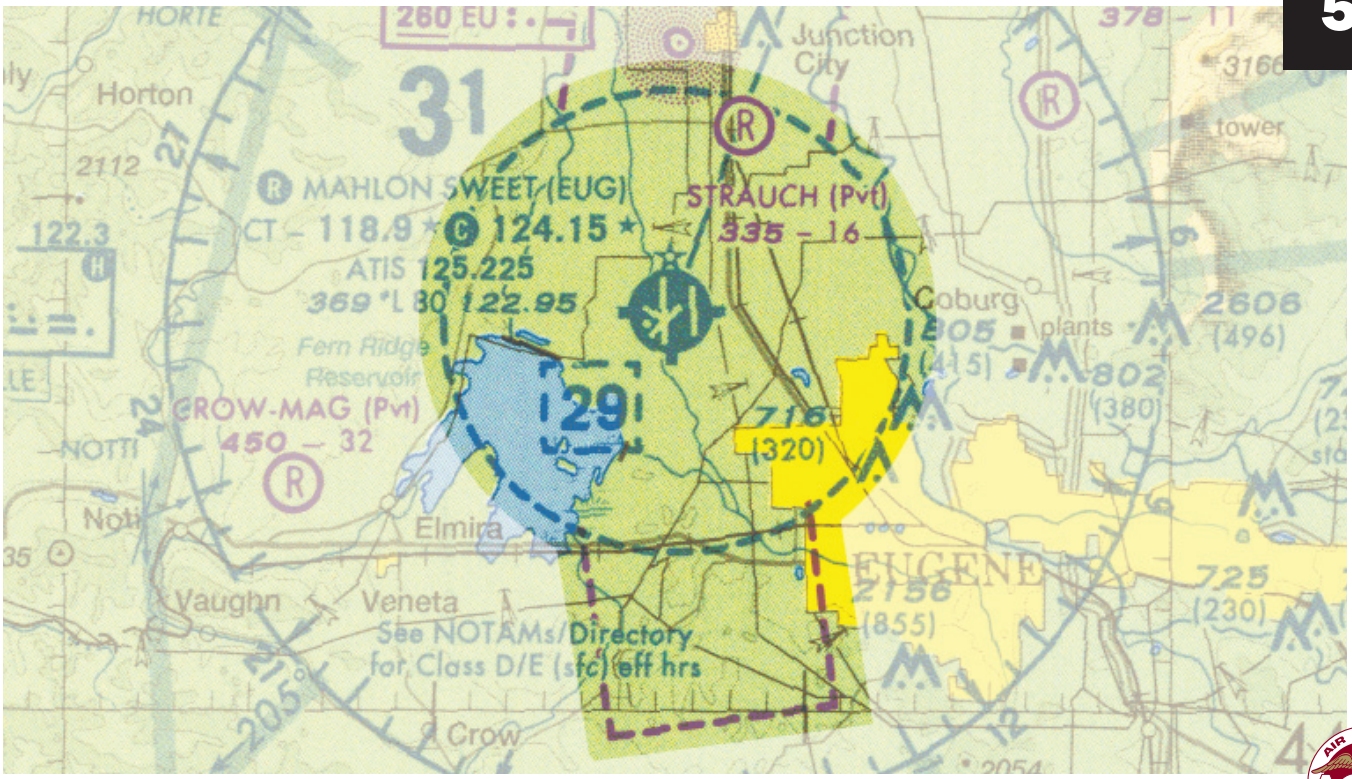

Question: Is there a speed limit within Class D airspace?
Answer: Yes. Below 2,500 agl and within four nautical miles of the primary airport, aircraft are limited to 200 knots indicated airspeed.

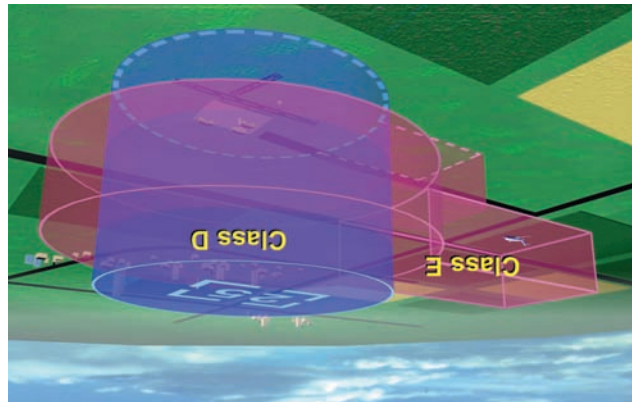

Class D Airspace

Ref. AIM 3-2-5

Description

- Surrounds smaller towered airports
- Typically 10 nm in diameter
- Ceiling generally 2,500 agl
- Usually reverts to a Class E surface area when the tower is closed
- May include Class E surface area extensions.


Pilot/Aircraft Requirements

- Establish and maintain two-way communications
- Visibility: Three statute miles
- Cloud clearance:
- 500 feet below
- 1,000 feet above
- 2,000 feet horizontal




Copyright AOPA Air Safety Foundation
 www.asf.org

12/05

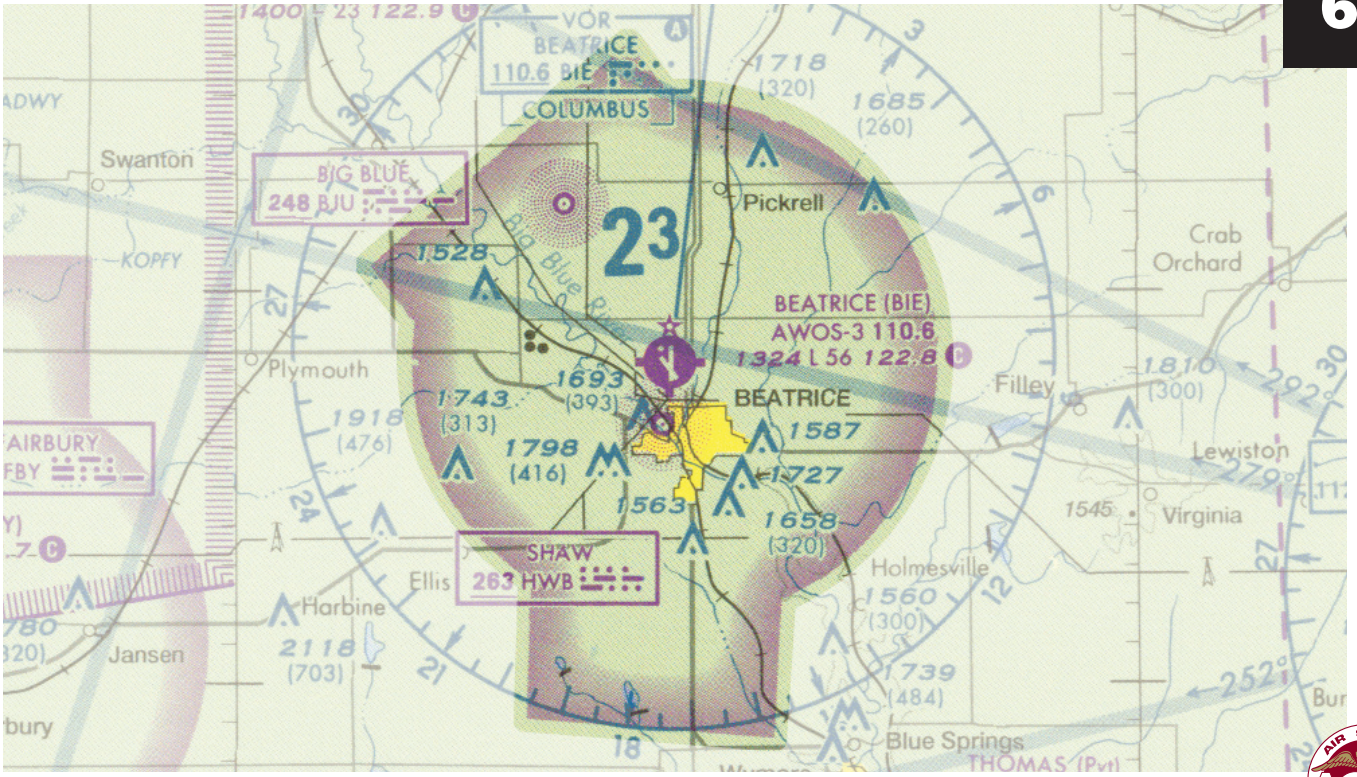

Answer: Class E transition areas exist to help separate IFR and VFR traffic in the vicinity of nontowered airports with instrument approaches.

Question: What is the purpose of a Class E transition area?

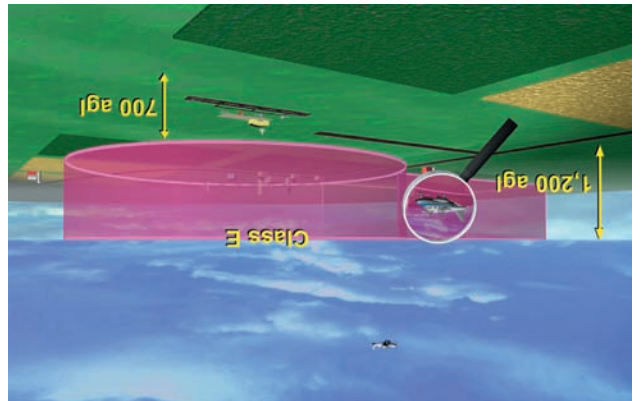

Class E Airspace, Transition Area (700 AGL)

Ref. AIM 3-2-6(e)(3)

Description


- Surrounds many non-towered airports
- Extends Class E airspace downward to accommodate IFR arrivals

Pilot/Aircraft Requirements

- Visibility: Three statute miles*
 - Cloud clearance:
 - 500 feet below
 - 1,000 feet above
 - 2,000 feet horizontal
- (*Below 10,000 msl)

Copyright AOPA Air Safety Foundation
www.asf.org



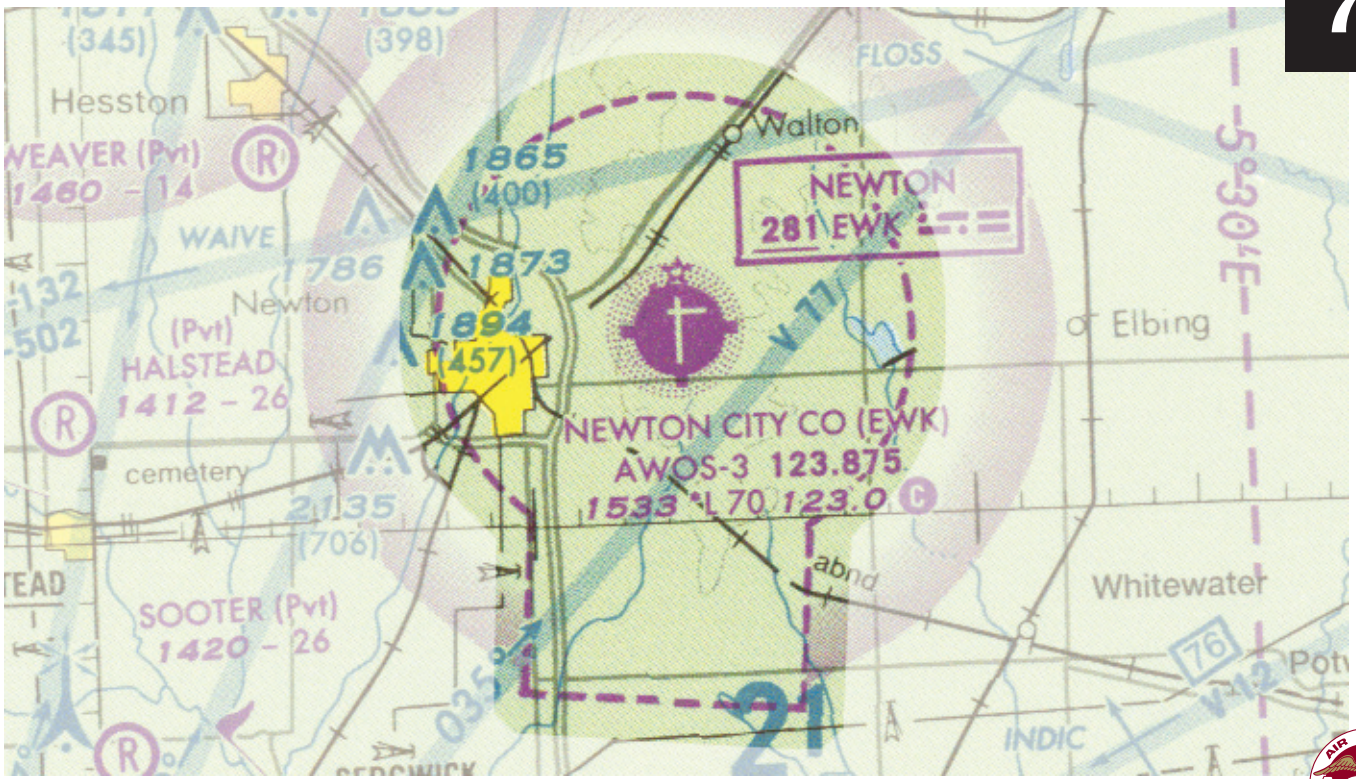

Class E Airspace, Surface Area

Ref. AIM 3-2-6(e)(1)

Description

- Around some airports, Class E airspace extends downward to the surface, rather than the normal 700 or 1,200 agl
- Class D airports with part-time towers usually become Class E surface areas when the tower is not in operation

Pilot/Aircraft Requirements

- Visibility: Three statute miles*
- Cloud clearance*:
 - 500 feet below
 - 1,000 feet above
 - 2,000 feet horizontal


(* Below 10,000 msl)

Copyright AOPA Air Safety Foundation

www.asf.org




12/05

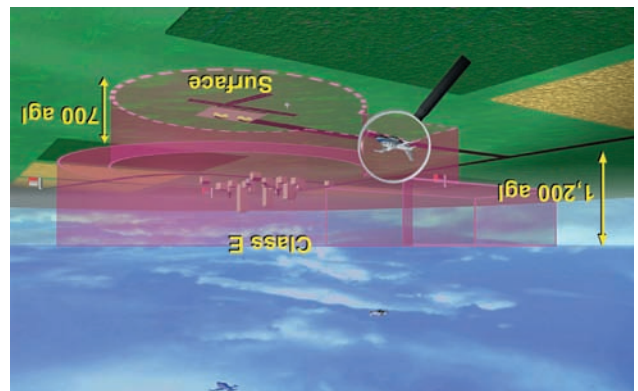

Question: What determines whether the airspace around an airport may be designated a Class E surface area?

Answer: The airport must have either a weather observer or a functional automated weather observing system (AWOS or ASOS).

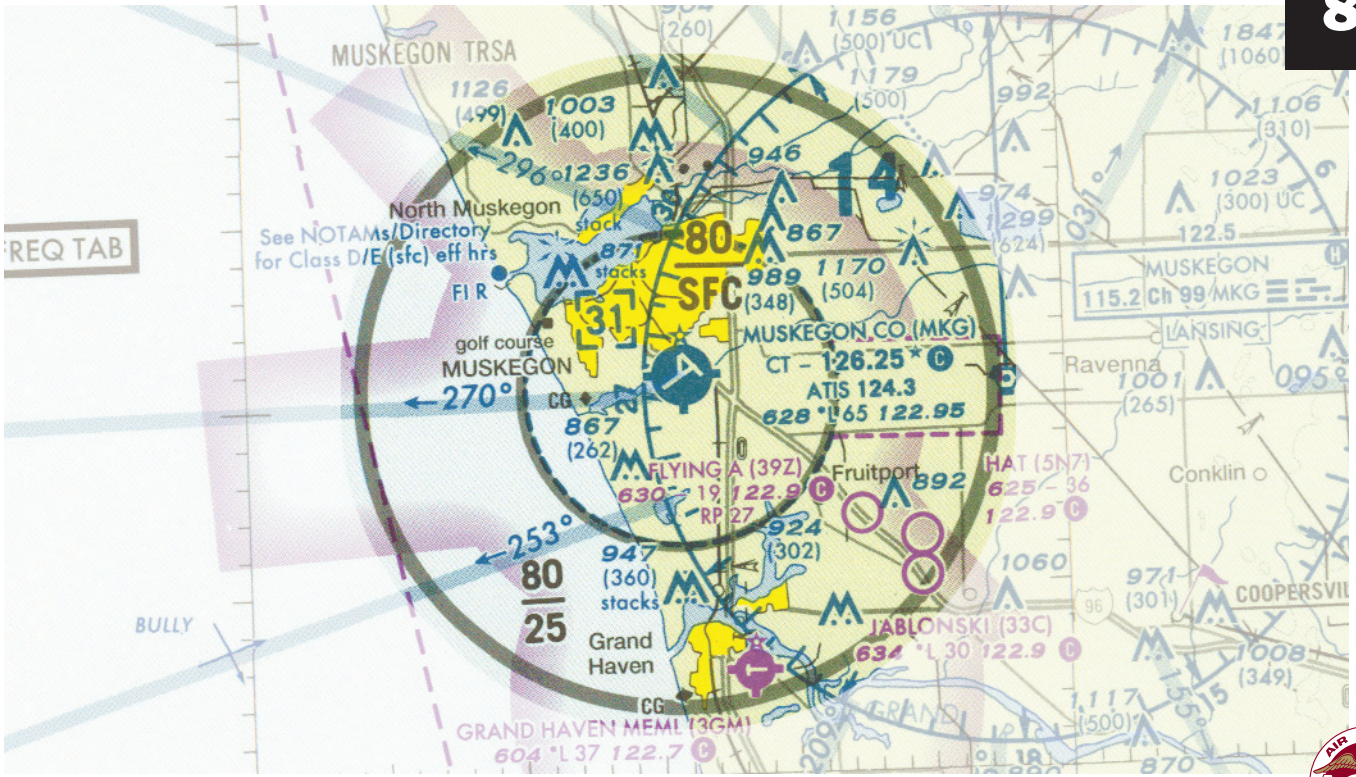

REQ TAB

See NOTAMs/Directory for Class D/E (sfc) eff hrs

TRSA

(Terminal Radar Service Area)
Ref. AIM 3-5-6

Description

- Surrounds Class D airports with expanded ATC radar services
- Pilots not required to participate
- Rules for Class D airspace within apply regardless of pilot participation


Pilot/Aircraft Requirements

- Transponder to participate in expanded services

Copyright AOPA Air Safety Foundation




12/05

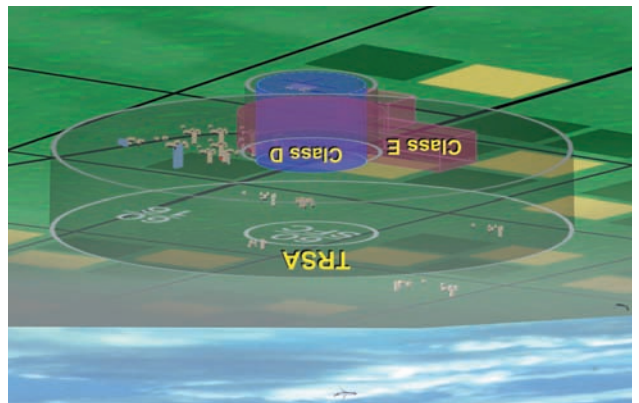

Question: Where do TRSAs fit in the general airspace classification system?

Answer: TRSAs are "leftovers" from the previous (pre-1993) airspace classification system. As a general rule, they exist at airports whose traffic load requires enhanced radar service, but that aren't busy enough to justify Class C airspace.

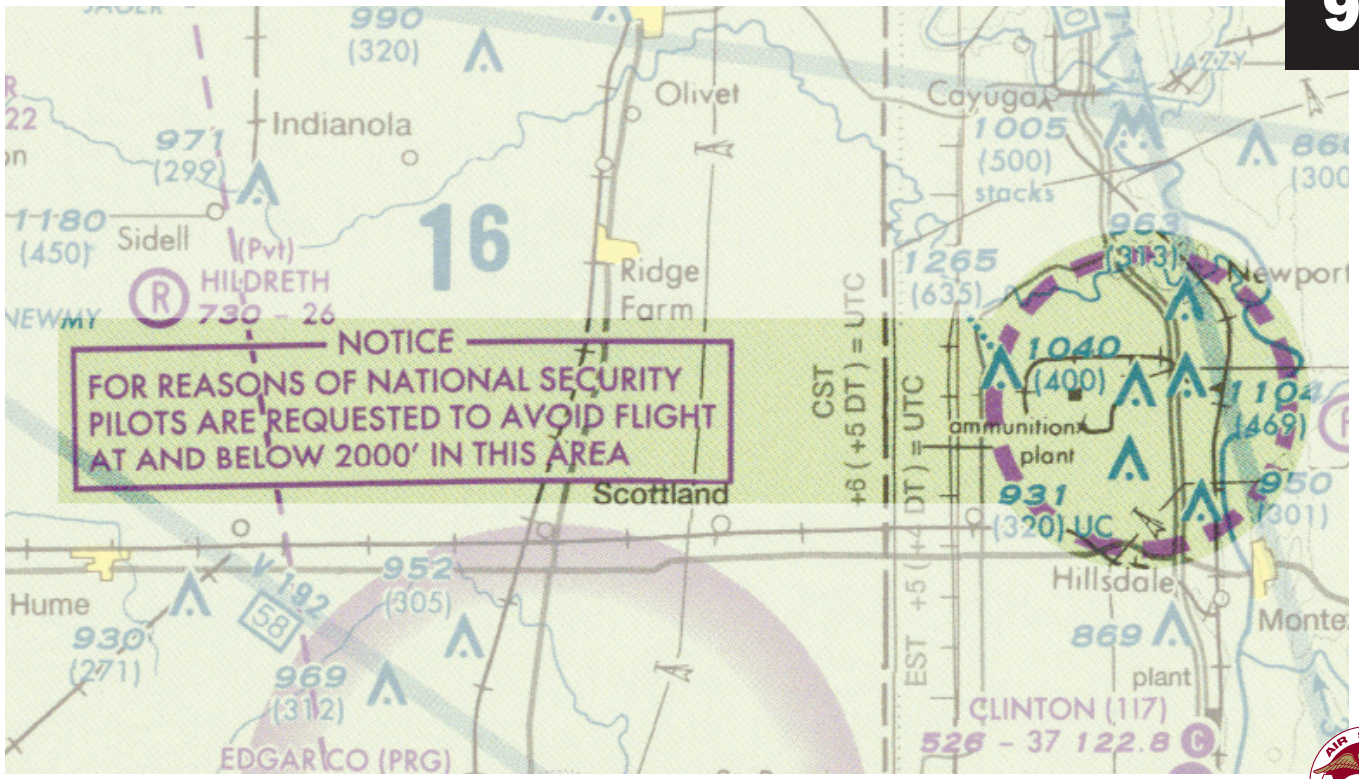

FOR REASONS OF NATIONAL SECURITY
PILOTS ARE REQUESTED TO AVOID FLIGHT
BELOW 1200' MSL IN THIS AREA

Question: Where might you expect to find an NSA?
Answer: NSAs can be established anywhere a need for greater security exists, but are most often seen around government/military installations, power plants and factories.

NSA

(National Security Area)
 Ref. AIM 3-5-7


Description

- Established around areas requiring special security precautions
- Pilots requested to avoid flight below a specified altitude
- Flight may be temporarily restricted or prohibited by notam
- Not applicable

Pilot/Aircraft Requirements

Copyright AOPA Air Safety Foundation
 www.asf.org
 12/05



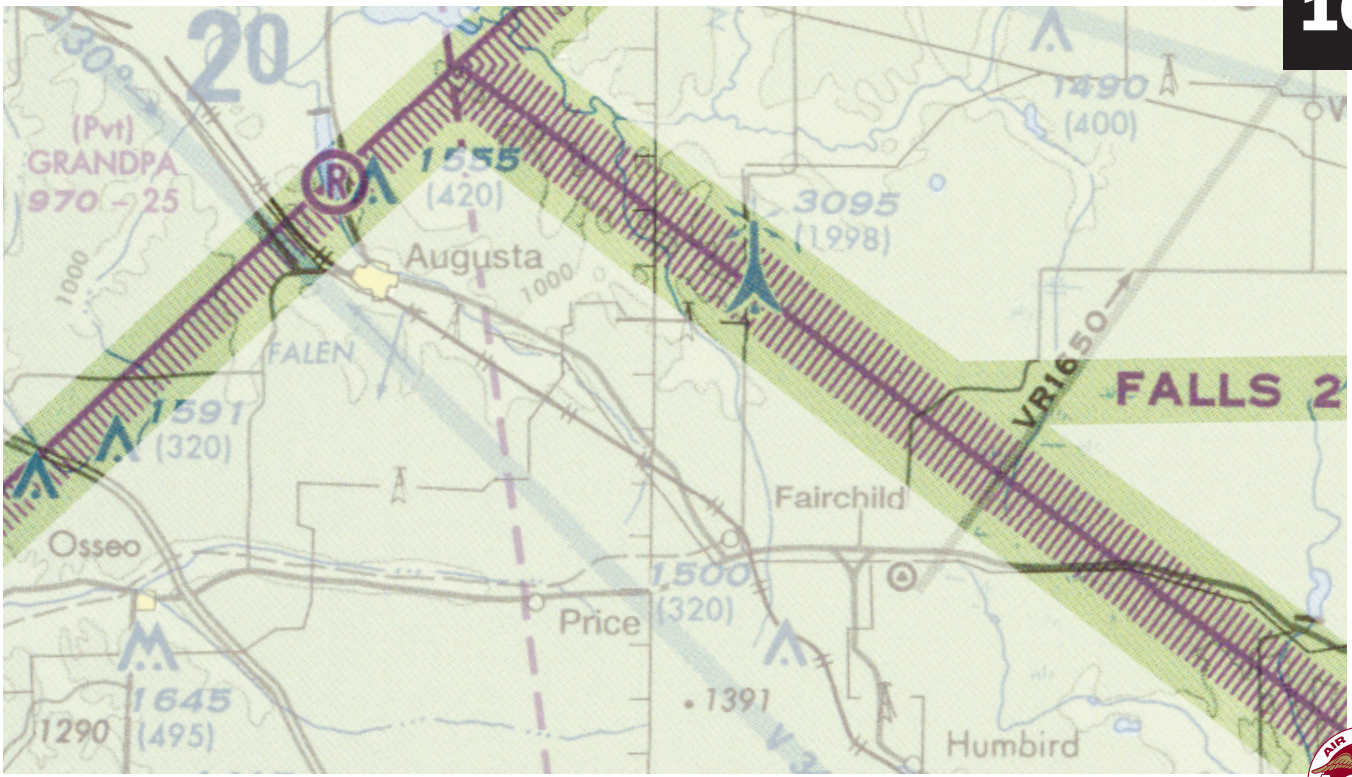

MOA

(Military Operations Area)
Ref. AIM 3-4-5

Description

- Established to allow military training activities
- VFR pilots may fly through active MOAs, but are advised to exercise extreme caution
- Check with controlling ATC facility (noted on sectional charts) prior to entering

Pilot/Aircraft Requirements

- Not applicable

Copyright AOPA Air Safety Foundation
www.asf.org




12/05



Question: What kinds of military flight operations take place within MOAs?

Answer: High-speed flight, aerobatic maneuvers and low-level flight can all be expected. In certain MOAs, "lights out" training is also permitted. For more information, view ASF's *Mission: Possible* online course.

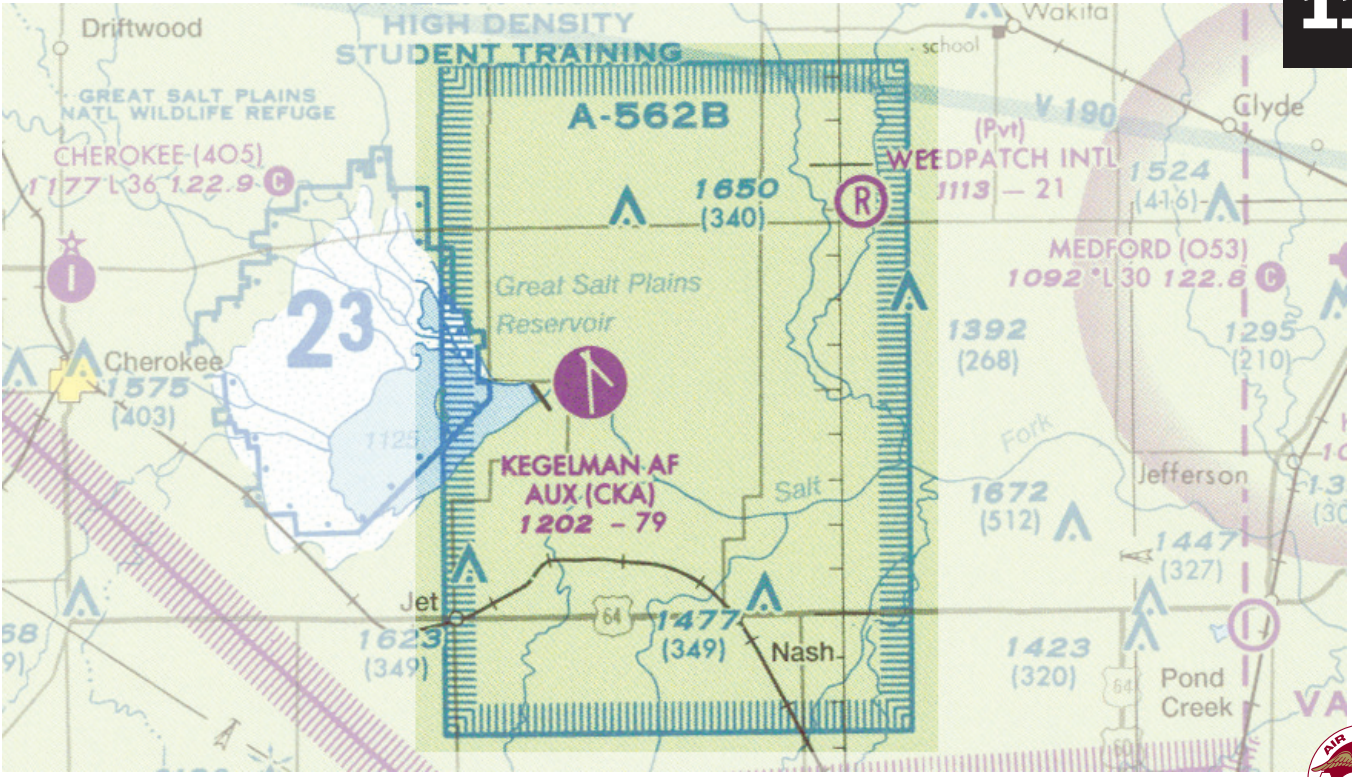

ALERT AREA
A-631

Question: Do I need to contact ATC prior to entering an Alert Area?
Answer: No ATC contact/clearance is required to enter an Alert Area.

Alert Area
Ref. AIM 3-4-6


Description

- Established in areas with a high volume of pilot training or other activities.
- Pilots advised to be particularly vigilant in scanning for traffic
- Pilot/Aircraft Requirements
- Not applicable


Copyright AOPA Air Safety Foundation
www.asf.org



12/05

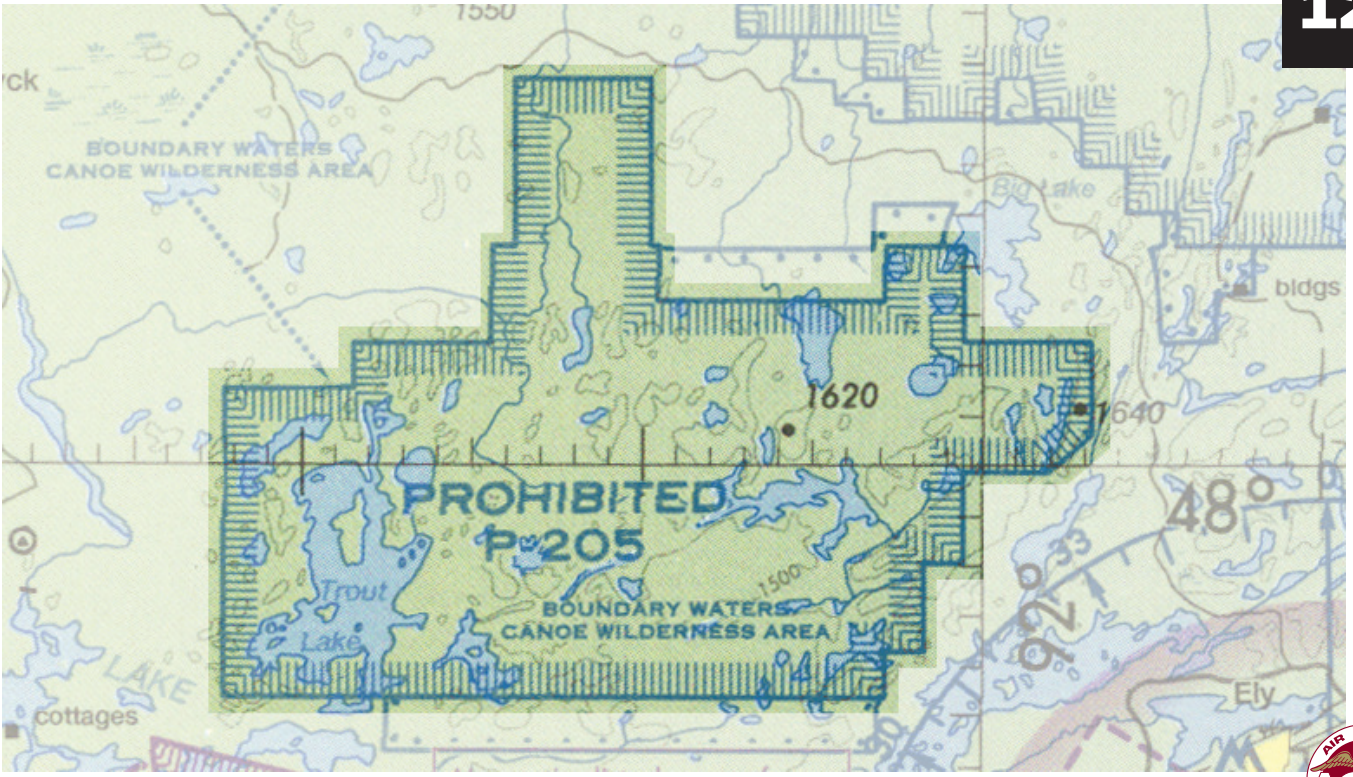

Question: How much distance should I maintain from Prohibited Areas?
Answer: It's a good idea to steer well clear of Prohibited Areas. Allow at least a couple of miles to account for navigation error and variances between GPS and ATC radar positions.

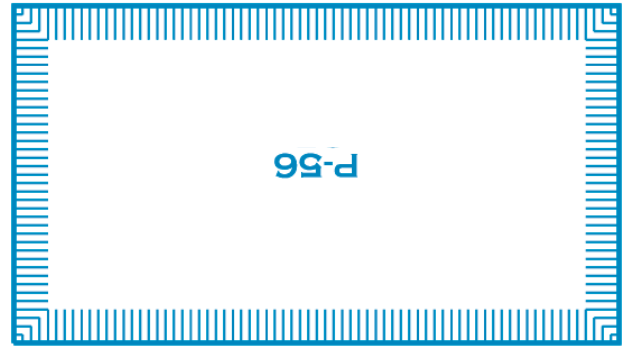

Prohibited Area

Ref. AIM 3-4-2

Description

- Established over highly sensitive locations
- Examples: Camp David (P-40), Crawford, TX (P-49)
- Flight within a prohibited area is not permitted
- Pilot/Aircraft Requirements
- Not applicable

Copyright AOPA Air Safety Foundation




www.asf.org

12/05



Question: May you legally fly through an inactive Restricted Area?
Answer: Yes, but you should be certain to contact the controlling ATC facility for current status before entering the airspace.

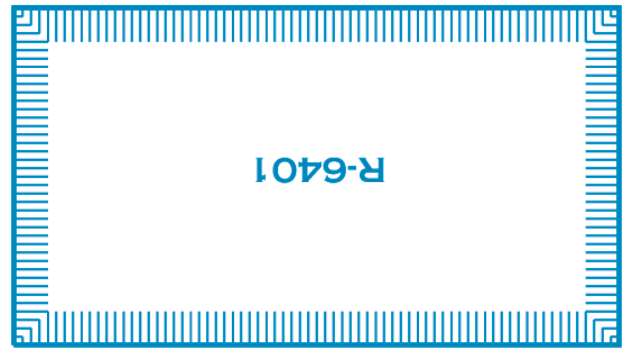

Restricted Area

Ref. AIM 3-4-3

Description

- Separates civilian traffic from potentially hazardous military activities
- Flight through an active restricted area is not permitted
- Check with controlling ATC facility (noted on sectional charts) for current status prior to entering

Pilot/Aircraft Requirements


- Not applicable

Copyright AOPA Air Safety Foundation



www.asf.org

12/05

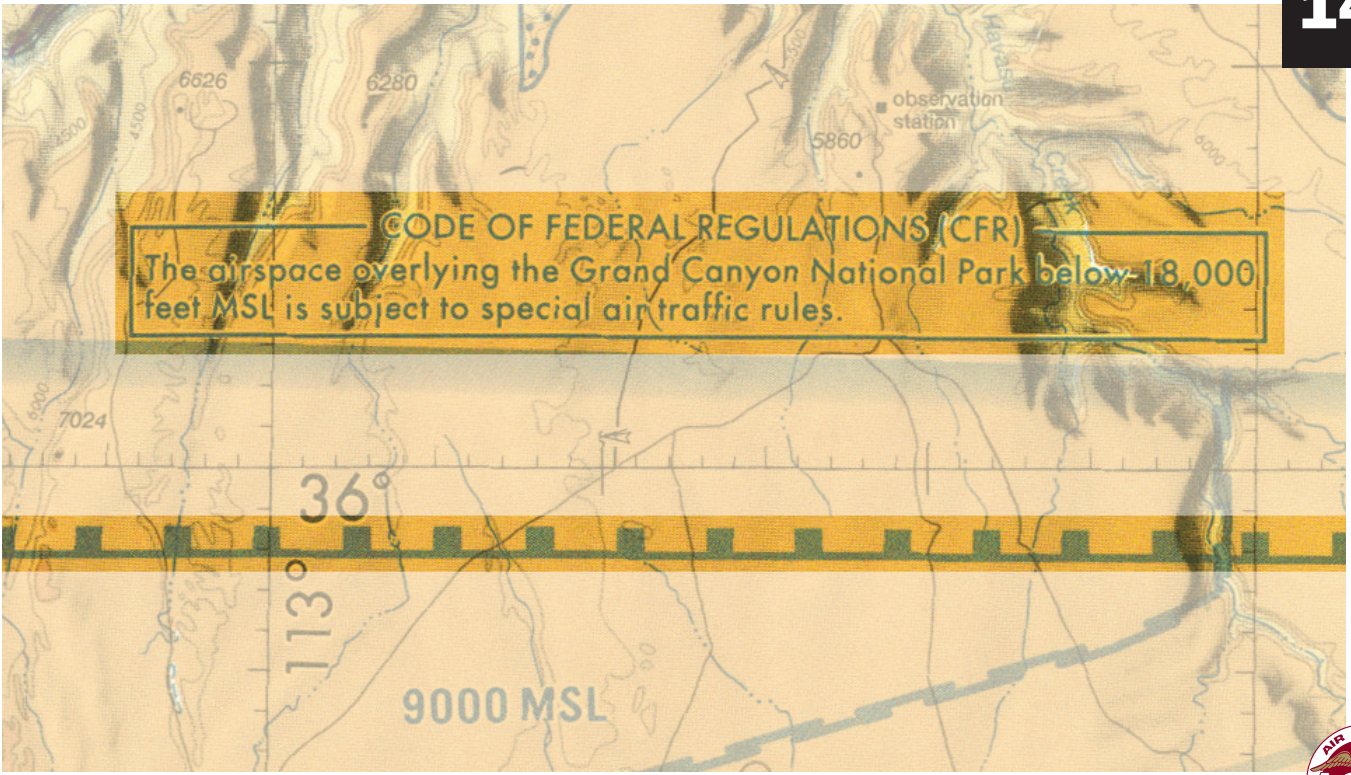


CODE OF FEDERAL REGULATIONS (CFR)
 The airspace overlying the Grand Canyon National Park below 18,000 feet MSL is subject to special air traffic rules.



Question: What kinds of procedures exist for flying within SFAR areas?
Answer: Procedures vary. In the Grand Canyon, for example, special transition routes and altitude rules apply.

SPECIAL FEDERAL AVIATION REGULATIONS (SFAR)
 14 CFR Part 93, Subpart U and SFAR 50.2 - GRAND CANYON NATIONAL PARK SPECIAL FLIGHT RULES AREA. Special regulations apply to all aircraft operations below 18,000 feet MSL.

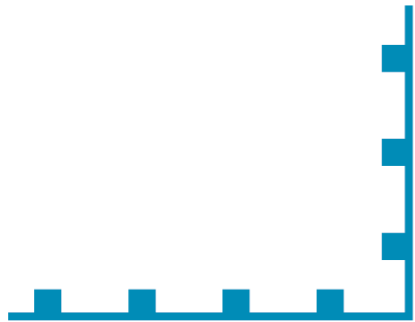

SFAR Area

(Special Federal Aviation Regulations)


Description

- Depicts airspace subject to special regulation
- Examples: Grand Canyon; Washington, D.C. FRZ
- For operating rules refer to the chart legend, or the SFAR section at the beginning of FAR Part 91
- As specified by SFAR

Pilot/Aircraft Requirements

Copyright AOPA Air Safety Foundation
 www.asf.org
 12/05



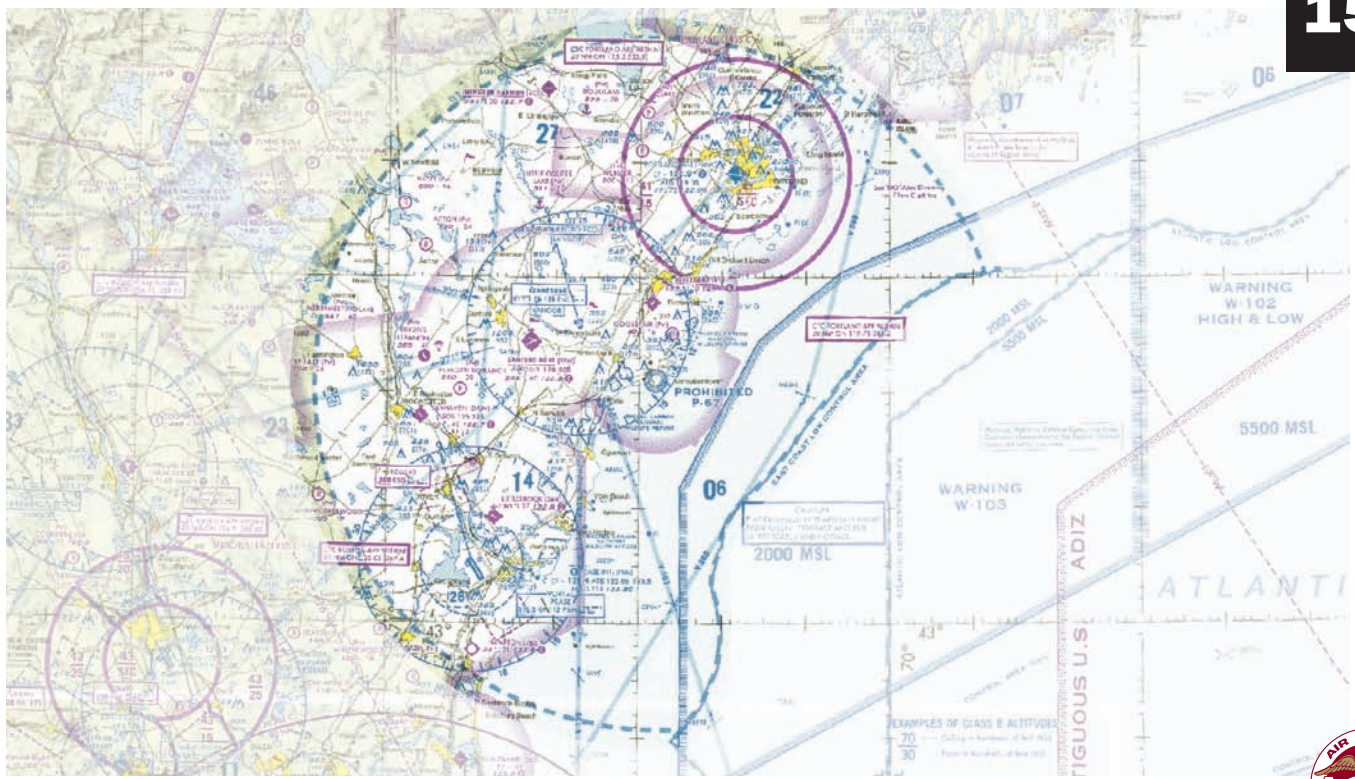

Question: How much notice is given prior to the establishment of a TFR?

Answer: In many cases, TFRs are established with little or no notice. Get a thorough Flight Service or DUATS briefing just prior to flight and call for updates when airborne. AOPA members can use the Real-Time Flight Planner to plan routes around current and upcoming TFRs.

AOPA has compiled plain-language guidance and a list of all

5/0860 (#2) MD. FLIGHT RESTRICTION ST. MICHAEL'S, MARYLAND, SECTION 91.141 OF THE CODE OF FEDERAL REGULATIONS, 14 CFR PART 91.141 OF THE OTT092024.0 UP TO BUT NOT INCLUDING 11/23/05) UNTIL FURTHER NOTICE. WIE UNTIL UFN (1000 LOCAL 11/23/05) UNTIL FURTHER NOTICE.

Size and location:
Centered on 384547N 0761418W
1-nm-radius TFR up to 1,499 ft AGL

Effective time:
1000 local, November 23 until further notice

Requirements for flight in the TFR:
Aircraft operations are not allowed

WIE UNTIL UFN


TFR (Temporary Flight Restriction)

Ref. AIM 3-5-3

- Description**
- Some of the more common TFRs are now chartered
 - Example: Kennedunkport, ME (P-67)
 - Most TFRs are not chartered
- Pilot/Aircraft Requirements**
- As specified by notam



Copyright AOPA Air Safety Foundation
www.asf.org
12/05

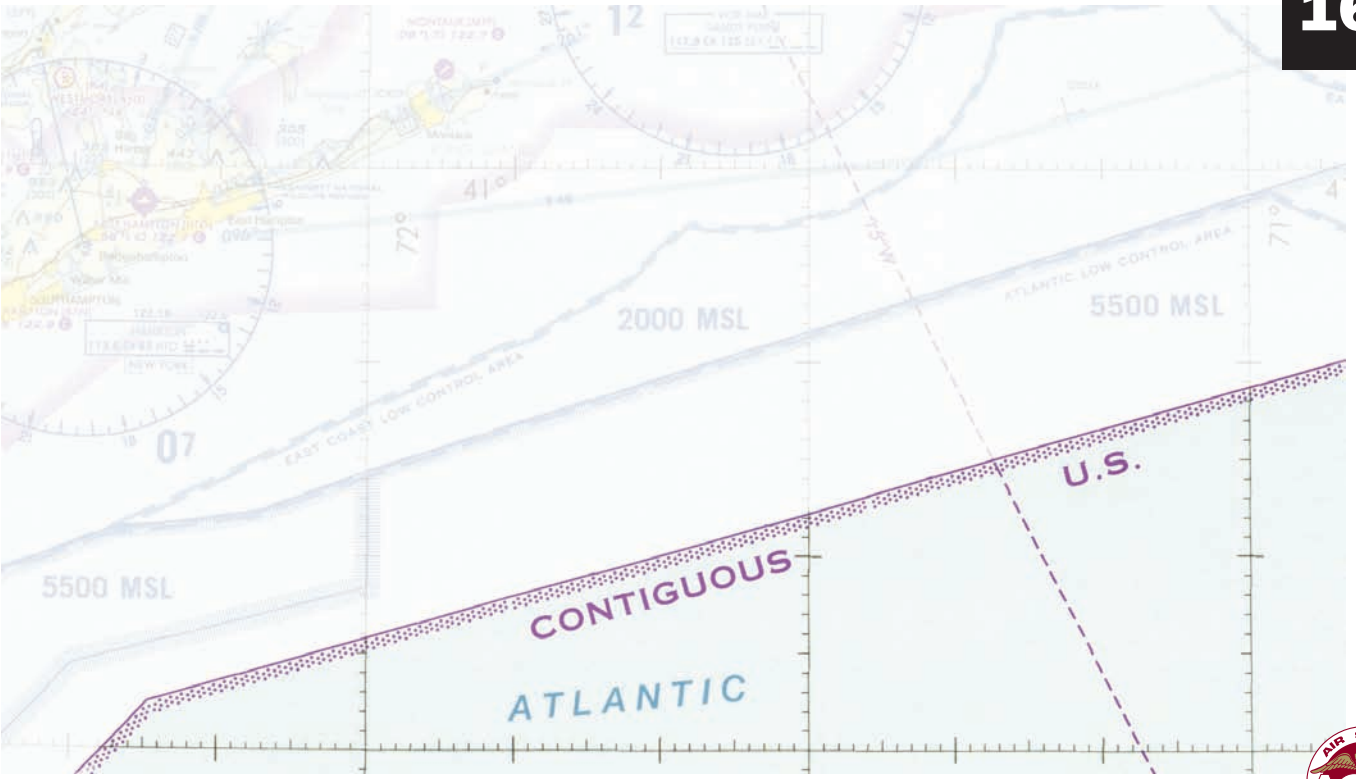

Question: What is a DVFR flight plan, and why is one required for VFR aircraft that enter the Contiguous ADIZ?

Answer: A normal VFR flight plan is not transmitted to ATC; it exists for search-and-rescue purposes only. A DVFR (Defense VFR) flight plan is transmitted to ATC, letting controllers know that the aircraft will be approaching the ADIZ under VFR.



Contiguous US ADIZ

(Air Defense Identification Zone)
Ref. AIM 5-6-1

- Description**
- Surrounds the nation's eastern, southern and western borders
- Pilot/Aircraft Requirements**
- IFR or DVFR (Defense VFR) flight plan
 - Discrete transponder code
 - DVFR aircraft must make position reports prior to entering

Copyright AOPA Air Safety Foundation
www.asf.org
12/05





Answer: Yes. The minimum altitude is voluntary, though we urge pilots to be "good neighbors" and comply with the request.

Question: Is it legal to operate below 2,000 agl within a Special Conservation Area?



Special Conservation Area

Ref. AIM 7-4-6

Description

- Surround many national parks, wildlife refuges, etc.
- Pilots requested to avoid flight below 2,000 agl
- Pilot/Aircraft Requirements
- Not applicable

Copyright AOPA Air Safety Foundation
www.asf.org




12/05



Question: Are you required to contact ATC before entering a Warning Area?

Answer: No, but it is a good idea to contact the controlling ATC facility for status information prior to entry. Active Warning Areas can be dangerous places for general aviation aircraft.

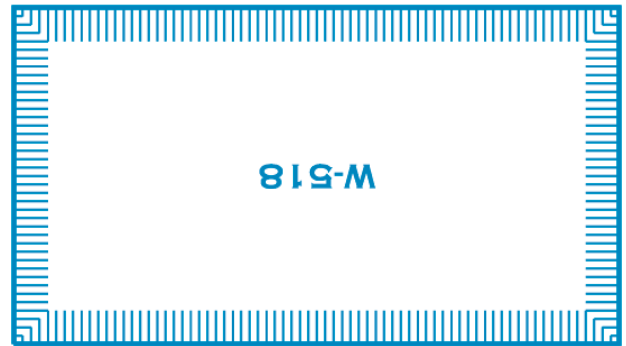

Warning Area

Ref. AIM 3-4-4


Description

- Extend outward from 3 nm off the coast
- Warn pilots of potentially hazardous activities
- VFR flight through active Warning Areas is permitted, though not recommended.
- Pilot/Aircraft Requirements
- Not applicable


Copyright AOPA Air Safety Foundation



12/05

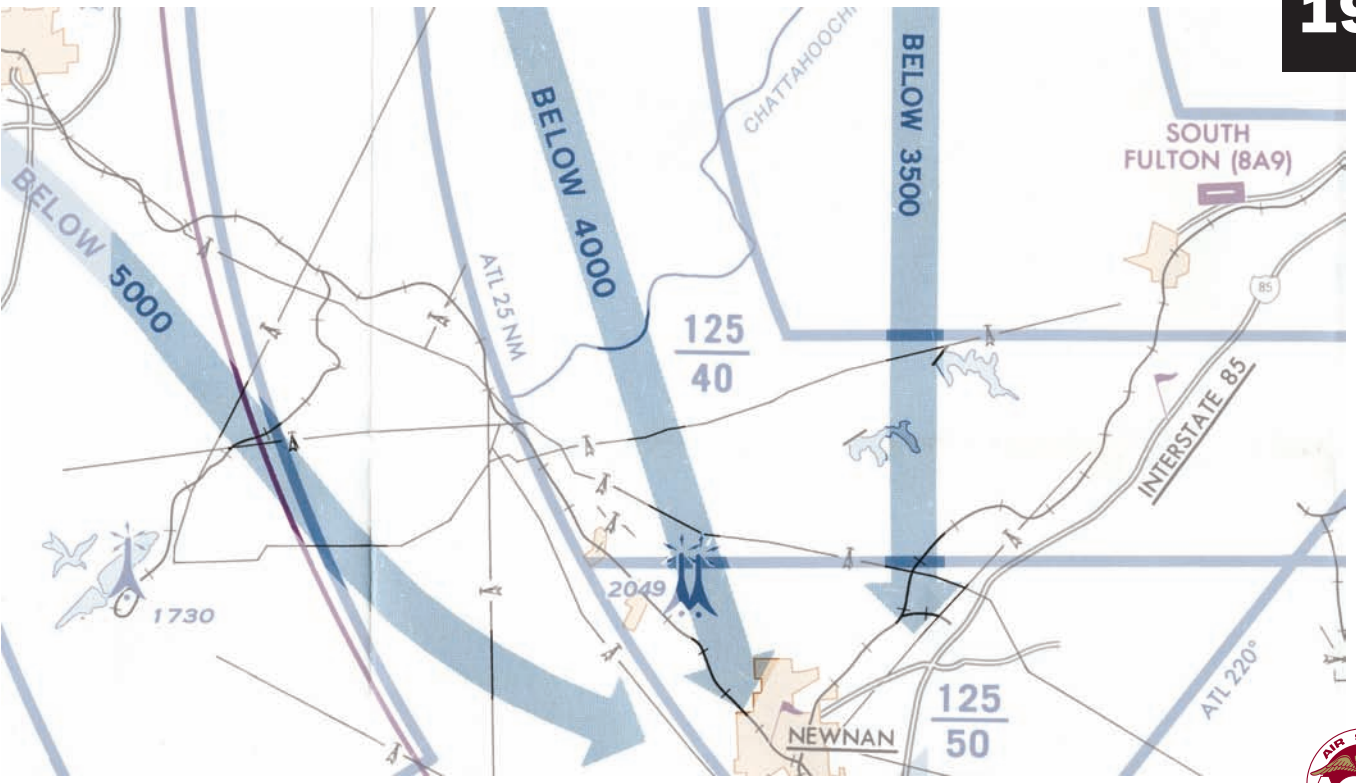

Question: Will a VFR Flyway take you into Class B airspace?
Answer: No. VFR flyways route you around Class B airspace. Remember, though, that they may take you through other areas with their own requirements (Class D airspace, for example).

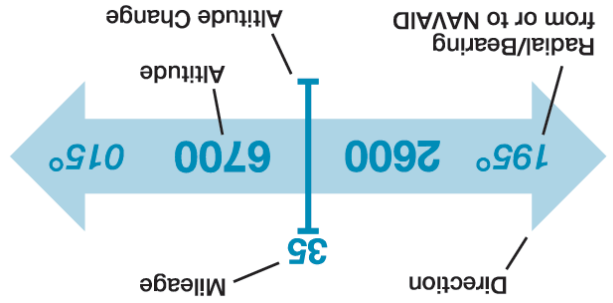

- Description**
- Help to expedite VFR traffic in the vicinity of Class B airspace
 - Do not require a Class B clearance
 - Pilot must still comply with requirements for other airspace entered
 - Depicted on the rear of Terminal Area Charts
- Pilot/Aircraft Requirements**
- Mode C transponder


VFR Flyways

Ref. AIm 3-5-5



Copyright AOPA Air Safety Foundation
 www.asf.org

12/05

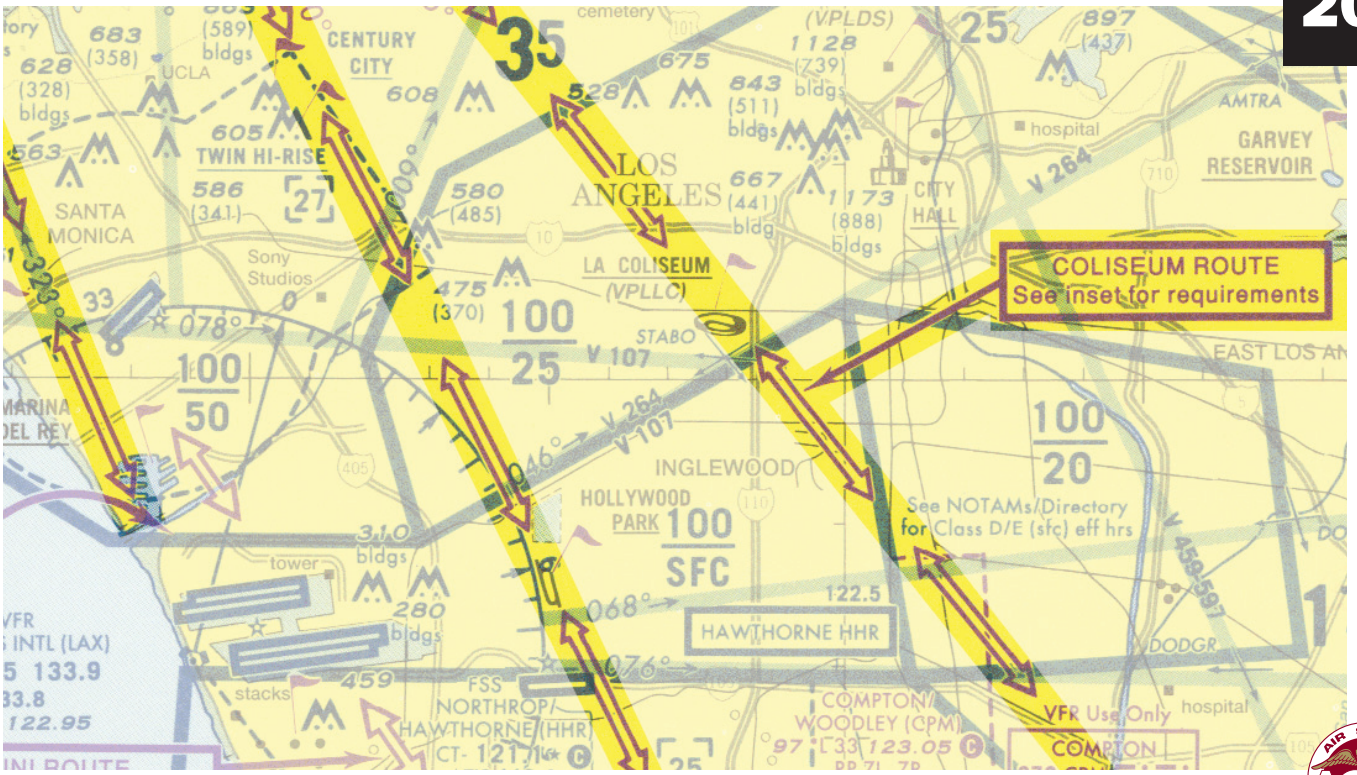

VFR Transition Routes

Ref. Aim 3-5-5

- Description**
- Used to route VFR traffic through Class B airspace in an orderly manner
 - Require an ATC clearance
 - Depicted on Terminal Area Charts
- Pilot/Aircraft Requirements**
- ATC Clearance
 - Mode C transponder
 - Adherence to published route and ATC instructions

Copyright AOPA Air Safety Foundation
www.asf.org



12/05

